

User Manual for SecuRED BootLoader



1. USB HID Device

Step1: Plug in SecuRED to PC then open “BootLoader_USBHID” software. Click “BootLoad” button to start boot load progress.




USB Boot Loader software

Step2: Choose one firmware file, and then click “Open Button”

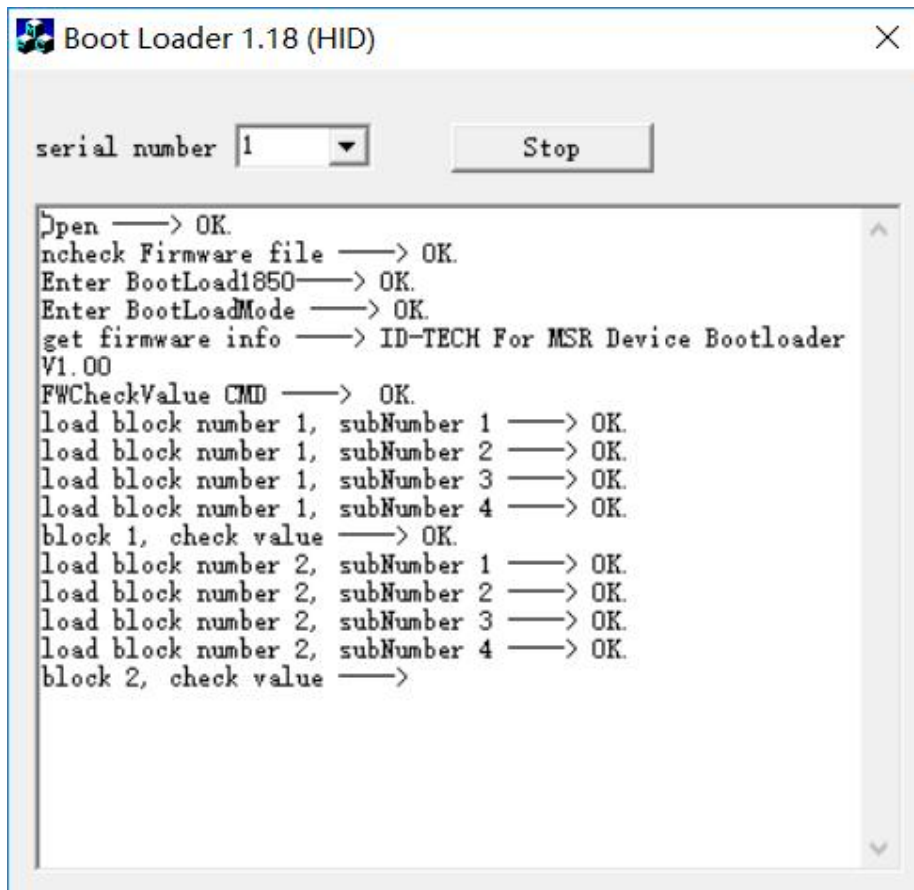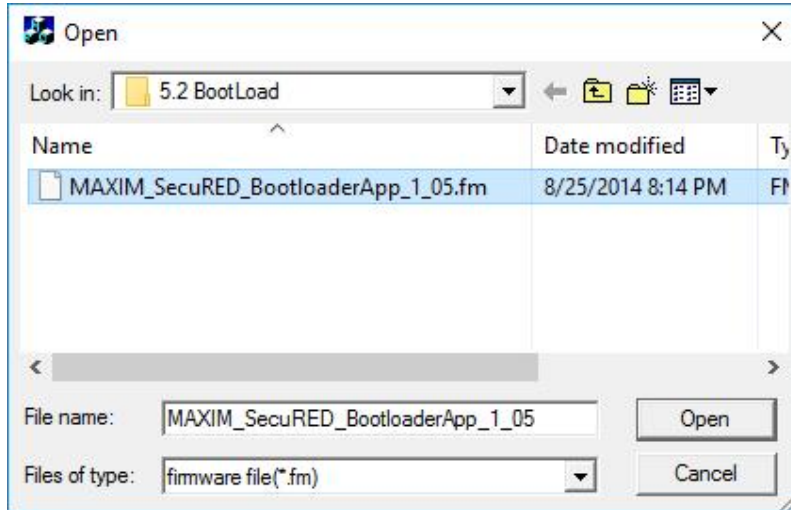


Step3: While firmware update complete, there is a prompt “bootload finish” popped up.

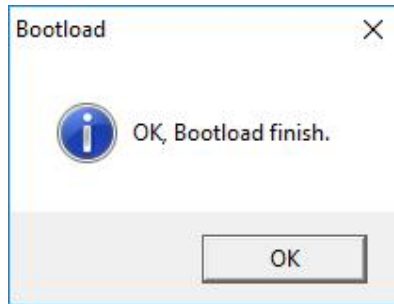


Note: Firmware update progress will perform about 2~3 minutes, please do not power down device before firmware update complete.

2. RS232 Device


Step1: Plug in DC 5V power supply with secured and then connect device to PC. Open BootLoader_RS232 software. Choose serial port. Then click "BootLoad" button.

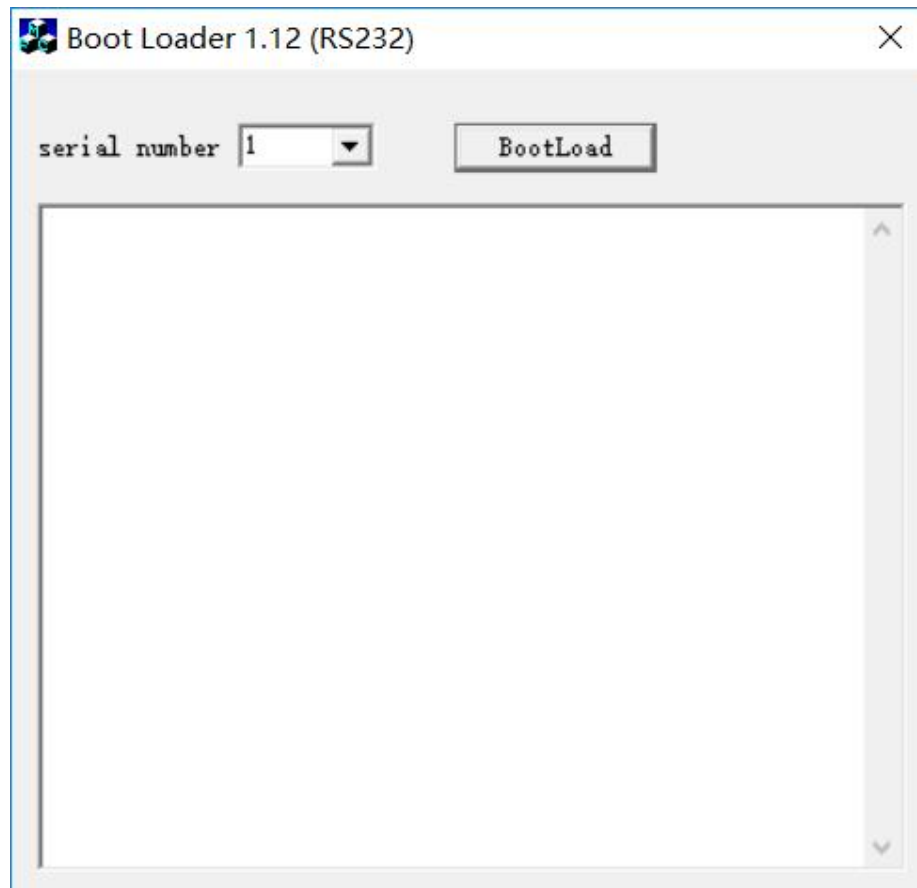

Step2: Choose one firmware file, and then click "Open Button"

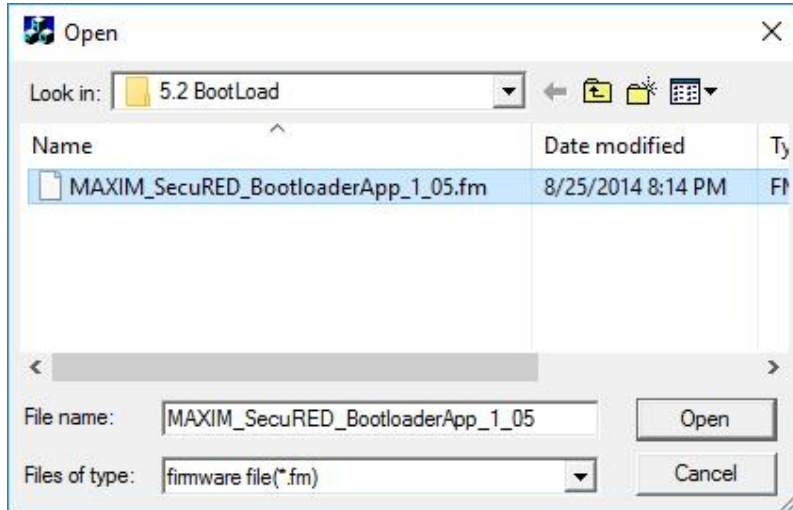

Step3: While firmware update complete, there is a prompt “bootload finish” popped up.

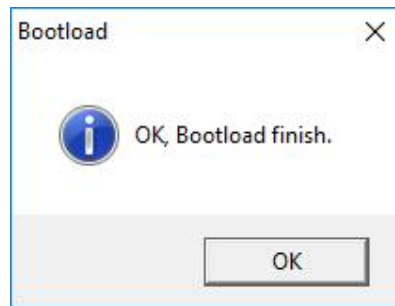

Note: Firmware update progress will perform about 2~3 minutes, please do not power down device before firmware update complete.